




Assembly Instructions

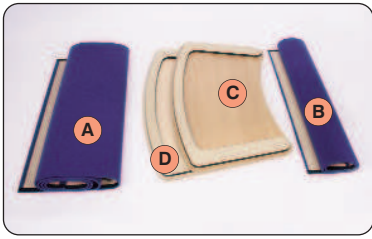


Kit includes: Outer wrap (A), inner wrap (B), top (C) and base (D)

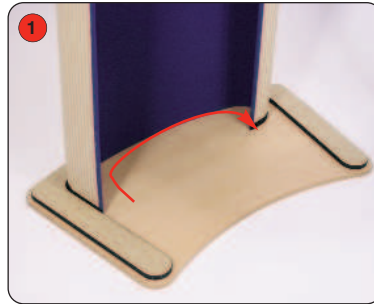


1 Place the base (D) on the floor with the raised shape face up, and wrap the inner wrap (B) on the inside of the shape.

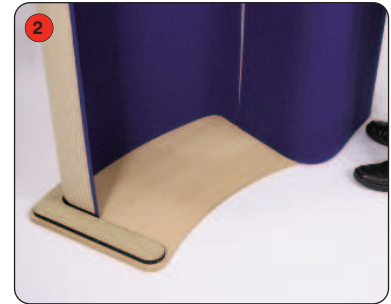

2 Take the outer wrap (A) and begin to wrap around the remaining section of the raised shape

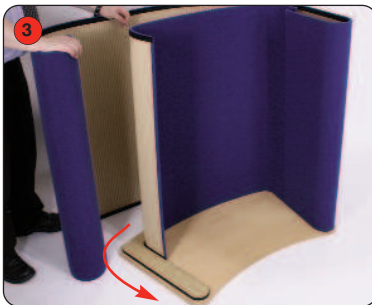

3 Ensure that the fit is secure against the hook fastener strip. Leave the front open to add the top.

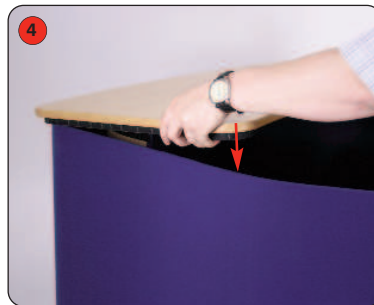


4 Slot the top in between the two wraps.



5 You may need to loosen the wraps from the base to fit onto the top and then secure on to base again.



6 Once the 'C' shape on the underside of the top is wedged securely between the two wraps, carry on wrapping around the base.

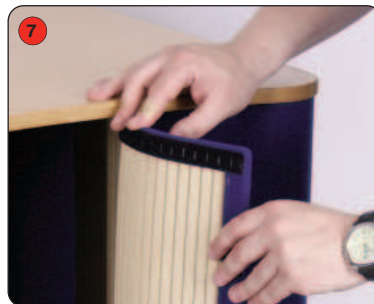

7 Ensure that the

